


Remove the screw(s) or loop and the tray will swing down to expose the components.

When removing any electrical component please note and record the wiring positions so that it can be correctly reinstalled.

Fuse Box

No 5 Fuse Box

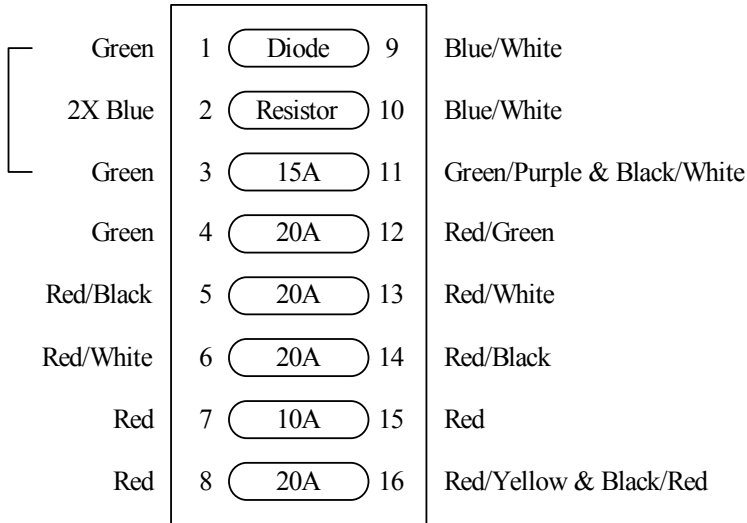

- | | |
|---|--|
| <p>1&3 To Power Point in Fusebox</p> <p>2 Ignition Warning Light
Voltage Regulator</p> <p>4 To Power Point in Fusebox</p> <p>5&6 To Fan Relay 87</p> <p>7 To Auxiliary on
Ignition Switch</p> <p>8 To Power Point</p> | <p>9 To Voltage Regulator</p> <p>10 To Blue on Ignition Warning Light</p> <p>11 To Wiper Switch (Green/Purple)
To Reverse (Black/White)</p> <p>12 To Fuel Pump Switch</p> <p>13 To Radiator Fan Right Hand</p> <p>14 To Radiator Fan Left Hand</p> <p>15 To Cigar Lighter</p> <p>16 To Hooter (Horn) (Red/Yellow)
To Stop Light Switch (Black/Red)</p> |
|---|--|

The fuse box may be installed in an inverted position. Please check the arrangement of fuses to determine orientation of the fuse box.

Correction 5/18/2005. Black/Red wire moved from No 6 Fuse Box Terminal 10 to No 5 Fuse Box Terminal 16. Terminal 7 changed from "To Fan Relay 86" to "To Auxiliary on Ignition Switch".

No 6 Fuse Box

Green	1	15A	9	Green/ White & Green/Black
Green	2	10A	10	Black/ Yellow & Black
Grey/Red	3	10A	11	2 X Grey/Black
Grey/Red	4	10A	12	2 x Grey/Green & 1 x Grey/Black
Yellow	5	20A	13	Yellow/ Black
Yellow	6	15A	14	Yellow
White	7	15A	15	White/ Black
White	8	15A	16	2X White

1 & 2 To Fuse Box Power Point	9	To Flasher Unit (Green/White) To Heater Blower Switch (Green/Black)
	10	To Voltage Stabilizer B (Black/Yellow) To Rev Counter (Black)
3 & 4 To Headlight Switch	11	To Park Lights, Left Front, Right Rear
	12	To Park Lights, Right Front (Grey/Green) To Park Lights, Left Rear (Grey/Green) To Dimmer Assembly (Grey/Black)
5 & 6 To Headlight Relay 56A	13	To Headlight, Right Hand, Low Beam
	14	To Headlight, Left Hand, Low Beam
7 & 8 To Headlight Relay 56B	15	Headlight, Right Hand, High Beam
	16	To Headlight, Left Hand, High Beam To High Beam Warning Light

The fuse box may be installed in an inverted position. Please check the arrangement of fuses to determine orientation of the fuse box.

Correction 5/18//2005: Fuse order corrected. Flasher fuse value revised. Wire on Terminal changed from "Grey" to "Grey/Black".